


BU500 User manual and Software

```
www.hides.com.tw -----> downloads -----> BU500 -----> dropbox upper right "download" ----> "direct download"
```


Please search your file in your PC download Folder -----> unzip zip file -----> **print pdf user Manual and please read !!**

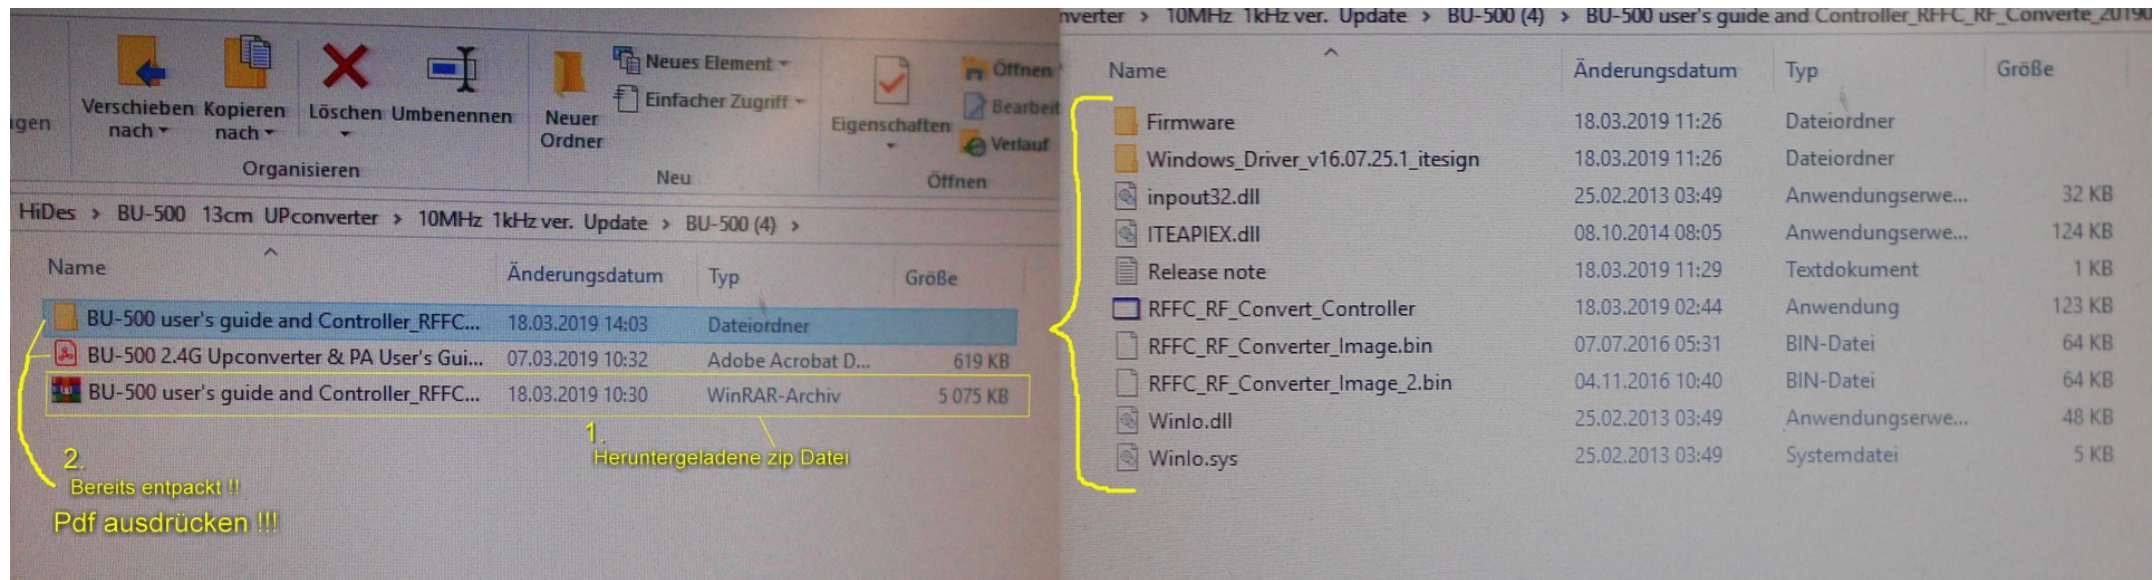


Default BU500 Local Oscillator frequency is 1968,0MHz (for 432MHz IF) !!!!

But if you need another Local Oscillator frequency, then please install the Driver in your computer "Windows_Driver_v16.07.25.1_itesign

```
-----read currently stored frequency----->>>>>>>>>>
```

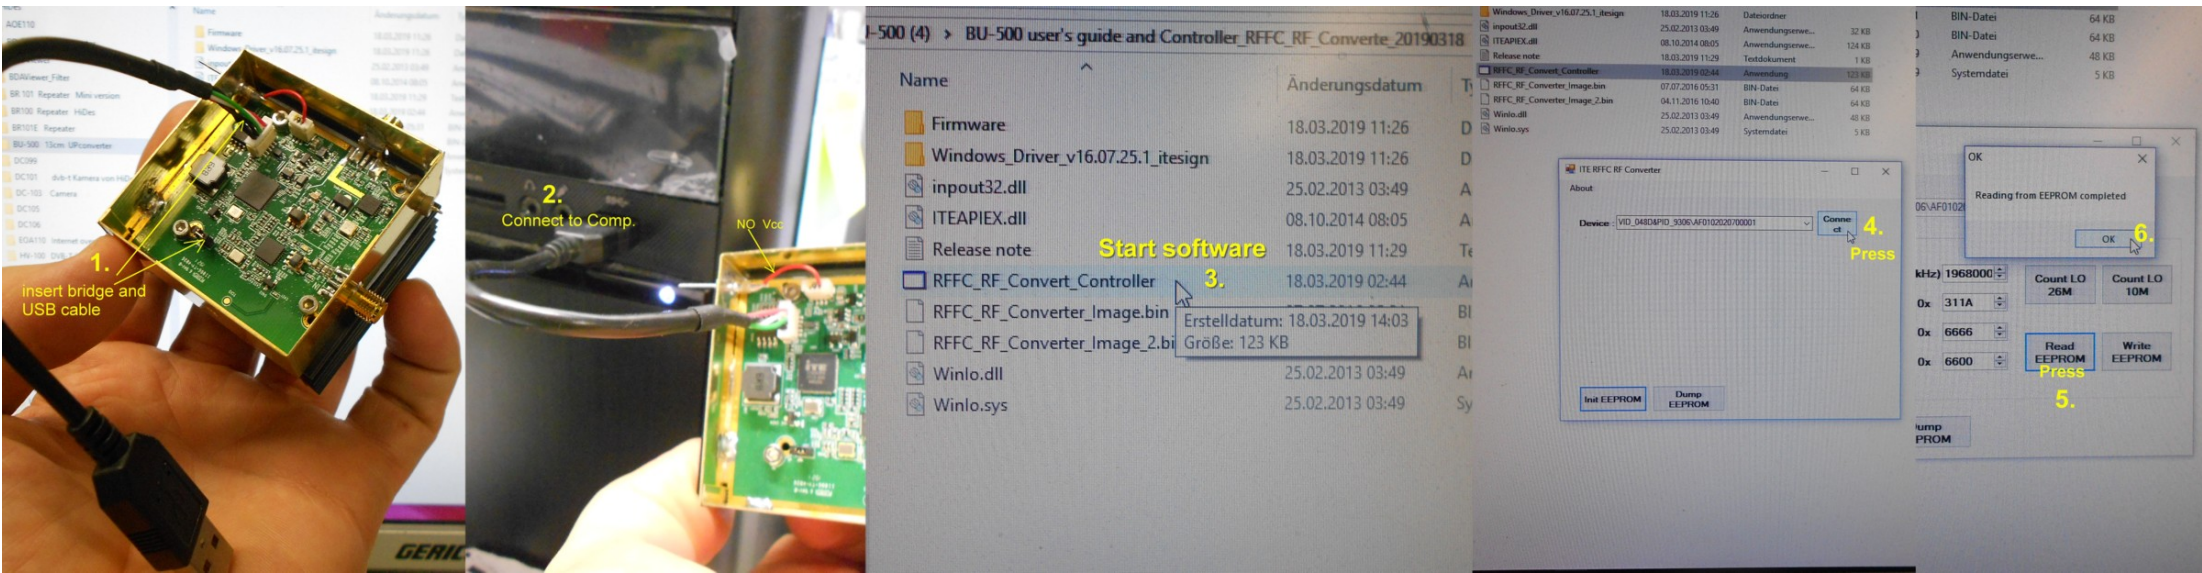Set new desired Local Oscillator Frequency.....

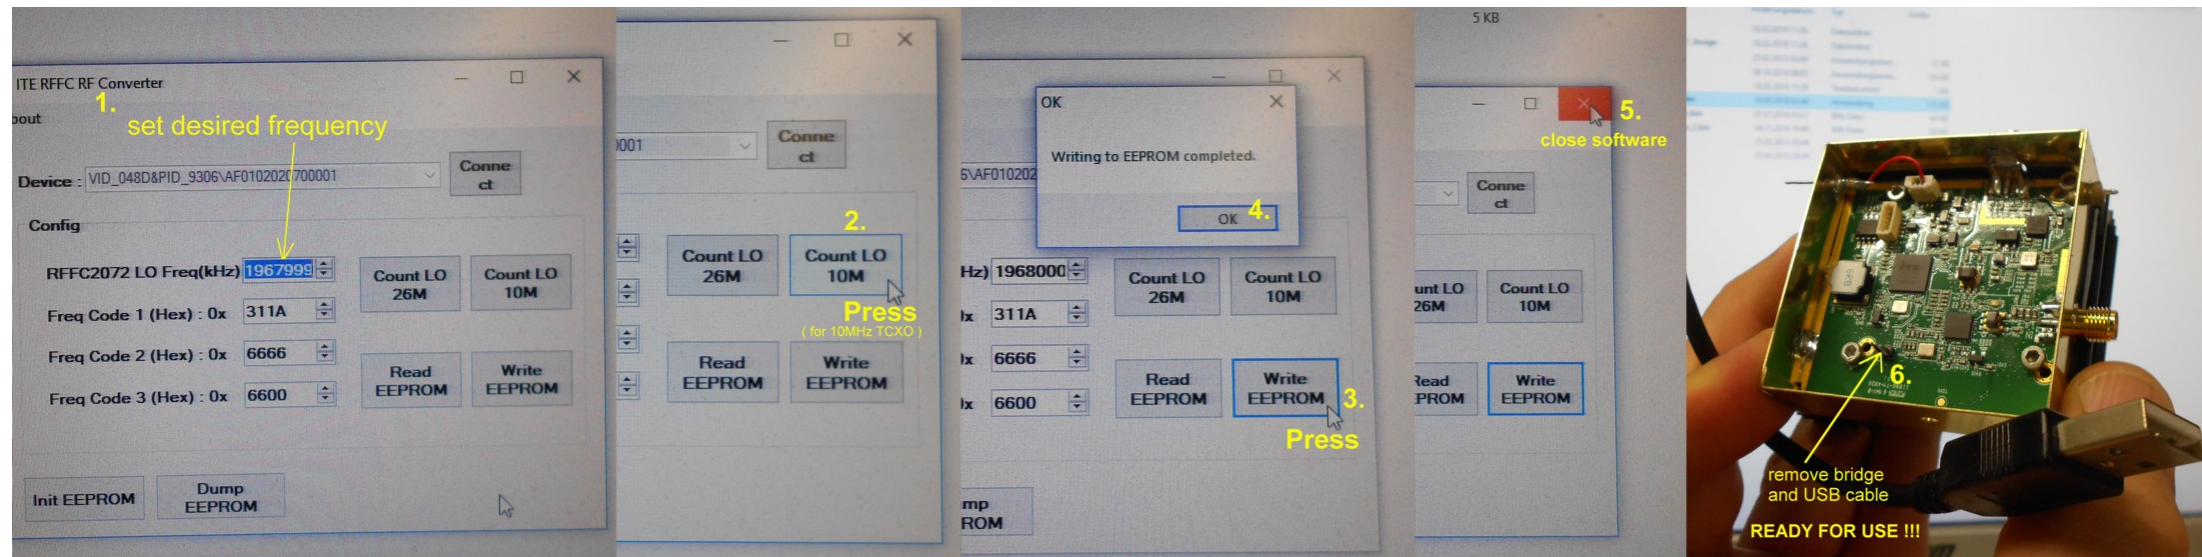

...if they have programmed correctly (1050.....2700MHz) , after switching **Vcc ON** green LED must light up.

Good luck, Hides support team